

Screen Installation Guide: Casement and Awning Windows


This guide details how to install and remove screens from our residential windows. Please follow the instructions below carefully, as deviating from these instructions or incorrectly following the instructions could compromise the screens.

If you have any questions, missing a screen part or it is damaged, please contact our customer service center at residentialorders@ykkap.com or by phone at 1-866-348-9091.


Identify the screen you are placing in the unit. Note that the frame indentation and rubber nubs on the corners **will always be on the interior**. This image shows the interior facing up.



Look for the screen accessory groove. It is a thinner space that will be on all the sides toward the exterior, running up most of the window frame. This is where the screen will be placed.

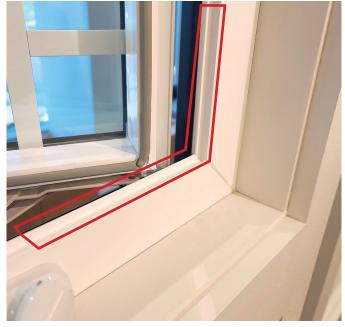

Interior View

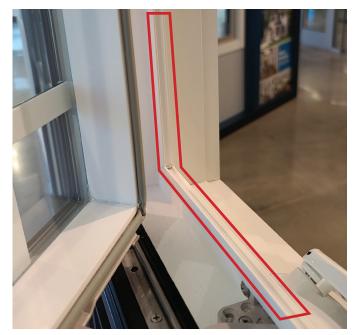

Exterior View


Tilt the window towards the least accessible side of the window (generally on the head or upper area of a window) and push in the screen onto the groove, making sure the white rubber nubs on the corners are inside the groove and not sticking out.

White Corner rubber nubs secured up top in the groove



Interior View

Then, push in and secure the other side of the screen into the groove. All the corners and frame rails should be level and flush on the window overlapping the window frame.

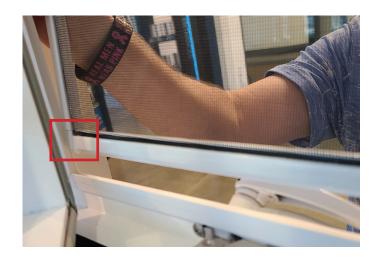


Exterior View



Interior View

The screen is now installed properly! To remove the screen, repeat the steps backwards utilizing the frame on the exterior to pull the screen, or carefully use a small flathead screwdriver on the edge of the screen frame to pry an area off the groove and pull the rest out.



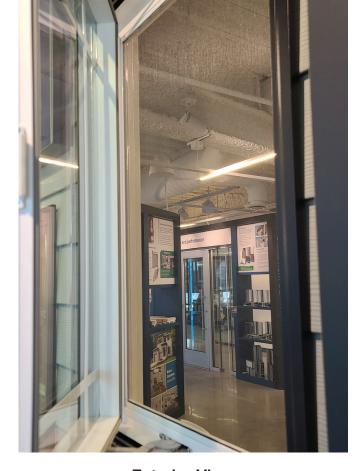

Interior View

Exterior View