

Screen Installation Guide: Hung and Slider Windows

This guide details how to install and remove screens from our residential windows. Please follow the instructions below carefully, as deviating from these instructions or incorrectly following the instructions could compromise the screens.

If you have any questions, missing a screen part or it is damaged, please contact our customer service center at residentialorders@ykkap.com or by phone at 1-866-348-9091.

Identify the screen you are placing in the unit. Note that the square, finger grip handles will always be on the interior. This image shows the interior facing up.

Side Tension Metal Springs



Square, finger grip handles

Look for the screen accessory groove. It is a thinner space that will be on the sides toward the exterior, running up most of the window frame. This is where the screen will be placed.




Exterior View



Interior View

Place the side of the screen with the metal tension springs in first. Remember, the square, finger grip handles will be facing the interior.

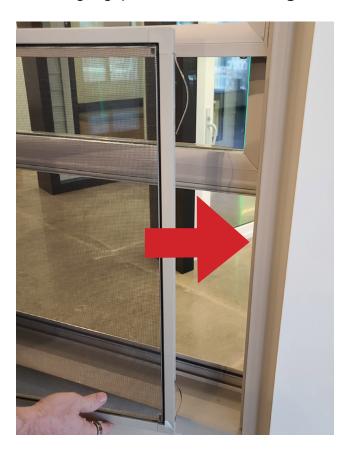



Apply some pressure toward the tension springs to push the screen, while moving the other side by using the finger handles from the inside, or holding the frame on the outside.



Pull the screen over toward the springs to allow clearance into the pocket





5

When the other side is also in the grooves, slowly release to force the screen over, hitting the small stops on the screen.



Small screen stoppers on frame

The screen is now installed properly! To remove the screen, repeat the steps backwards utilizing the finger grip handles on the interior and pulling over toward the spring tensions to loosen and the push outward to remove the screen off the track.



Pull over to the opposite side of the screen



Then, push out to remove the screen